




## Installation Instructions - Lever trim

911.56.019

911.56.038

911.56.055

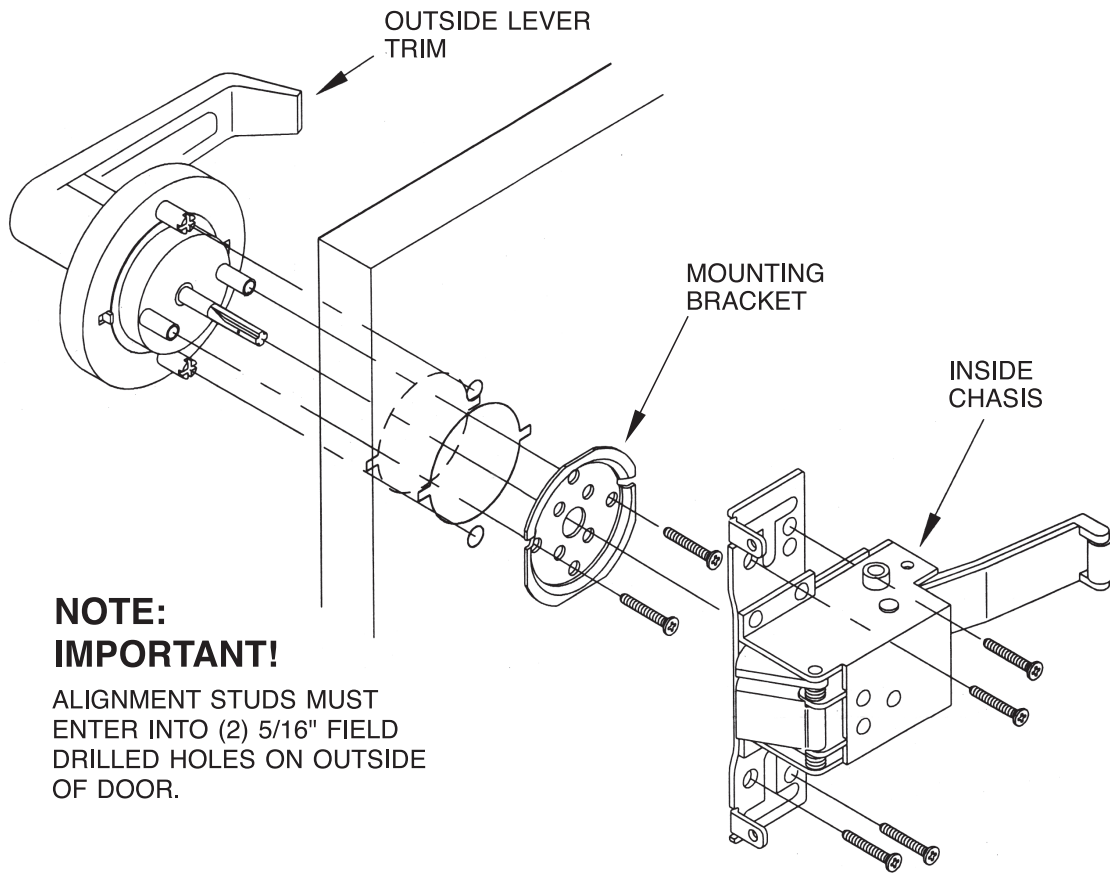


### NOTE: IMPORTANT!

ALIGNMENT STUDS MUST ENTER INTO (2) 5/16" FIELD DRILLED HOLES ON OUTSIDE OF DOOR.

732.99.30101

## TEMPLATE

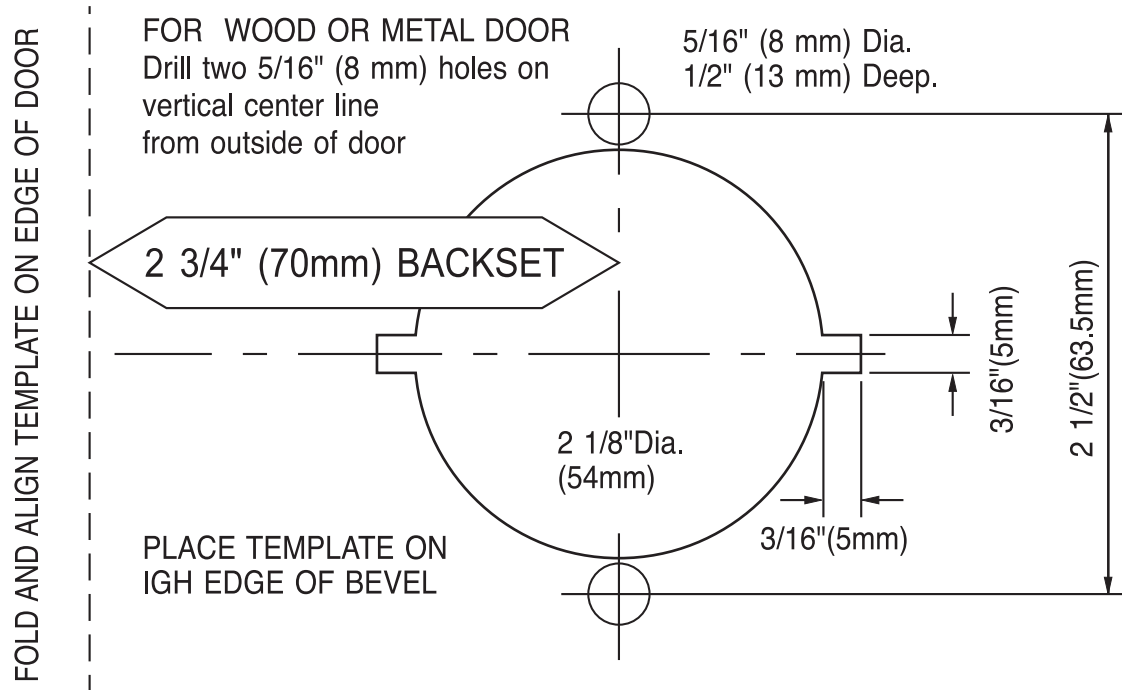

HTH 06/2016